




IMPORTANT - Toy will not function if assembled incorrectly! Follow these instructions in order.

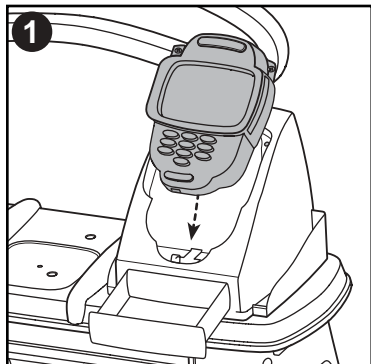

Place yellow cash register into red cash register base.

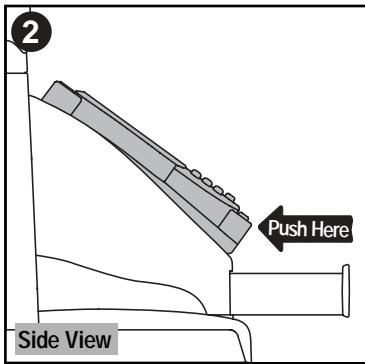


Push yellow cash register up, just below enter key, to fit it into the red cash register base.

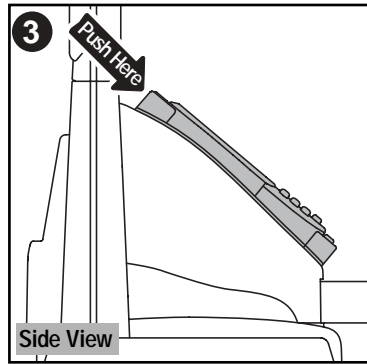

Push top edge of yellow cash register to completely fit it into red cash register base.

Tighten two screws at top of yellow cash register.

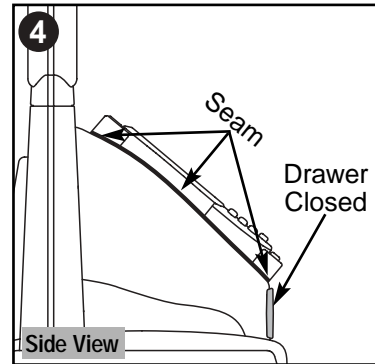

Make sure seam all around yellow cash register is flush with cutout edge of red cash register base.

Now, close cash register drawer. **If drawer will not stay shut, you have not assembled cash register correctly. Repeat steps 1-4.**

Questions?

Call Fisher-Price® Consumer Relations at 1-800-432-5437.